


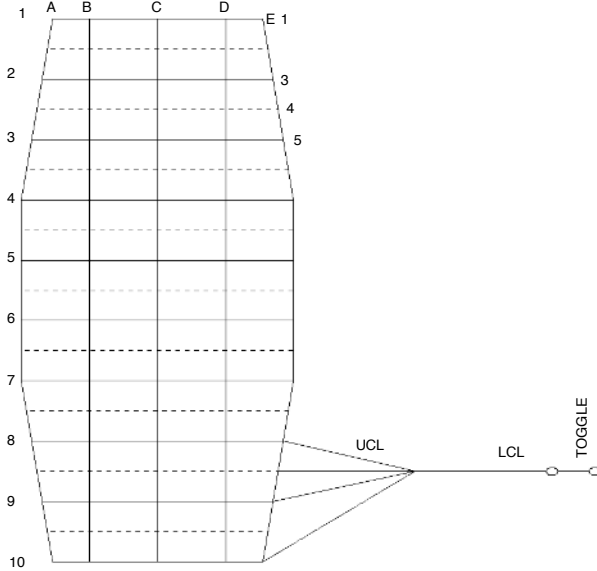


MAMBA

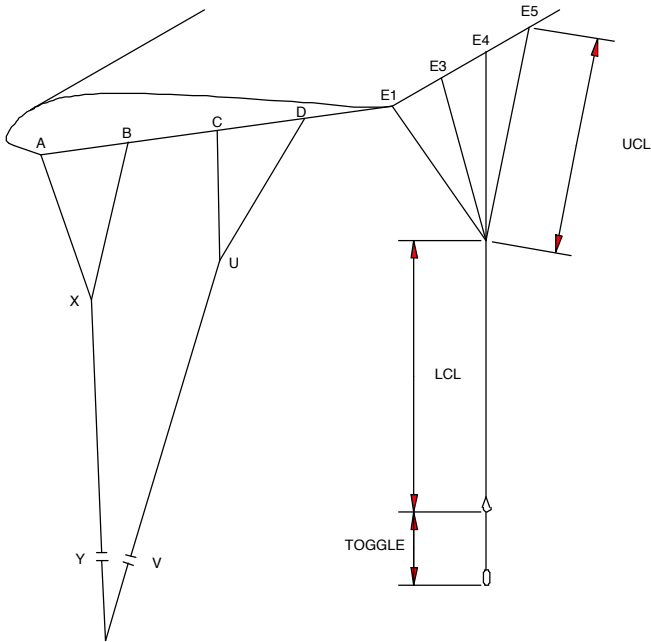

ENSURE LOOPS ARE HELD EVENLY AND SECURELY. EACH LINE TO BE LOADED TO 4.5KG DURING MEASUREMENT. MEASURE THE DEPLOYMENT BRAKE SETTING WITH THE TOGGLES STOWED. MEASURE THE FULL FLIGHT SETTING WITH THE TOGGLES UNSTOWED.

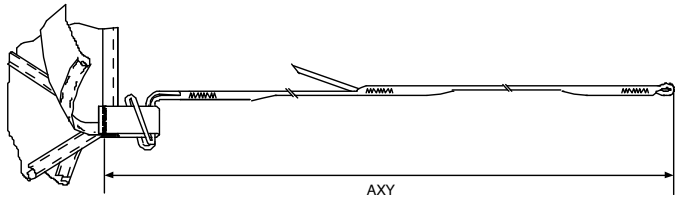

MEASURE FROM END OF SUSPENSION LINE LOOP TO BARTACK ON SUSPENSION LINE ATTACHMENT TAB.

Canopy	90	96	104	111	117	124	132	140	150
AXY1	90 4/8	93 7/8	97 6/8	101	103 7/8	108 4/8	112 7/8	116 7/8	121 6/8
A1-B1	3	3 1/8	3 2/8	3 2/8	3 3/8	3 4/8	3 5/8	3 6/8	3 7/8
A1-C1	8 1/8	8 3/8	8 6/8	9 1/8	9 3/8	9 5/8	9 7/8	10 2/8	10 4/8
AXY2	90 5/8	93 7/8	97 6/8	101	103 7/8	108 5/8	113	117	121 6/8
A2-B2	3 5/8	3 6/8	3 7/8	4	4 1/8	4 2/8	4 4/8	4 5/8	4 6/8
A2-C2	10 4/8	10 7/8	11 3/8	11 6/8	12	12 3/8	12 6/8	13 1/8	13 5/8
AXY3	90 5/8	93 7/8	97 6/8	101	103 7/8	108 5/8	113	117	121 6/8
A3-B3	2 1/8	2 1/8	2 2/8	2 3/8	2 3/8	2 4/8	2 4/8	2 5/8	2 5/8
A3-C3	8 1/8	8 3/8	8 6/8	9	9 2/8	9 4/8	9 6/8	10 1/8	10 3/8
A3-D3	15 4/8	16	16 5/8	17 2/8	17 6/8	18 1/8	18 6/8	19 2/8	20
AXY4	90 5/8	93 7/8	97 6/8	101	103 7/8	108 5/8	113	117	121 6/8
A4-B4	2 1/8	2 2/8	2 3/8	2 3/8	2 4/8	2 4/8	2 5/8	2 5/8	2 6/8
A4-C4	8 4/8	8 7/8	9 1/8	9 4/8	9 6/8	10	10 3/8	10 5/8	11
A4-D4	16 4/8	17	17 5/8	18 2/8	18 6/8	19 2/8	19 7/8	20 2/8	21 2/8
E1	29 4/8	29 5/8	30 6/8	31 6/8	30 3/8	33 5/8	39 6/8	41	42 1/8
E3	30 3/8	30 4/8	31 6/8	32 7/8	31 4/8	34 5/8	37 1/8	38 2/8	39 3/8
E4	30 7/8	31 1/8	32 4/8	33 4/8	33 2/8	35 3/8	36 6/8	37 6/8	39
E5	33 1/8	32 7/8	34 2/8	35 3/8	34 5/8	37 3/8	35 2/8	36 2/8	37 3/8
LCL	67 3/8	70 7/8	74	75 5/8	80 3/8	81 4/8	86 2/8	89 6/8	94 2/8
TOGGLE	15 6/8	17 6/8	18 4/8	19 1/8	19 5/8	19 5/8	17 7/8	18 4/8	18 4/8

All dimensions in inches

